
## **CPI Electron Device Business Magnetron Transmitter**



The transmitter cabinet contains the high voltage power supply, magnetron, solid state switch, and the high voltage tank assembly which includes the pulse transformer, energy storage high voltage capacitor, and filament power supply and control system for local or remote operation. CPI EDB provides a complete cabinet with a touch screen controller and dual-directional coupler which is part of the CPI EDB control system for monitoring forward and reflected power. Depending on the options selected CPI EDB can also provide RF isolators and servo-tuners for the magnetron if desired.

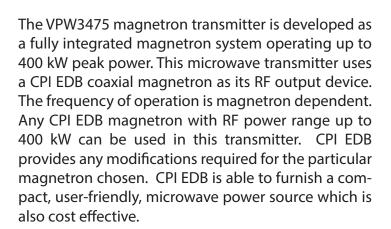

#### **FEATURES:**

- Up to 400 kW peak power
- Compatible with multiple magnetrons
- VSWR protection
- Modular design for ease of customization
- Touch screen local control with Ethernet connectivity for remote control and monitoring
- Air cooled

### **BENEFITS:**

- CPI EDB Magnetrons and modulators ensure compatible performance
- Transmitter is compatible with magnetrons at various power levels and frequencies
- Easy to use and user friendly
- Built in diagnostics and BIT for local or remote troubleshooting.

### **APPLICATIONS:**

- Instrumentation radar
- Weather radar
- EMI/EMC field testing



# **CPI Electron Device Business Magnetron Transmitter**

The high voltage power supply is a 19 inch tray inside the cabinet. It is completely self-protected with over current and input under/over voltage circuits. The filament power supply needed to operate the magnetron is contained in this unit. All external interface and control is done in this supply. Cooling is accomplished by internal fans.

Cathode pulsing is done by a completely solid-state array of IGBT switch boards that is driven by the control interface board in the high voltage power supply. This switch inherently limits current and pulse energy by design, no external circuitry is required for these functions. The IGBT switch is also a current controlled switch, set by a bias voltage from the high voltage power supply control interface board. The voltage across the switch will automatically change as the voltage across the magnetron changes due to frequency and temperature changes. Shifting from magnetron to magnetron only requires an adjustment of the drive voltage. This switch will inherently limit arc current in the event of a magnetron HV arc. The limit is less than twice the normal operating current in the event of a complete short circuit. The switch assembly has internal fans to cool the switches.

All high voltage is contained in a sealed tank. The pulse transformer that steps up the high voltage power supply output to the required magnetron voltage, the storage capacitor bank to supply the energy during the pulse, and the magnetron filament connections are all contained in this tank. The magnetrons are mounted at the top of the enclosure for easy access. A fan is provided to cool the magnetron.

#### Options:

- A servo-amplifier can be supplied to provide frequency control using computer commands.
- An RF isolator or circulator can be provided for VSWR protection

#### Instrumentation and Control

## Front Panel Control and Display

The magnetron transmitter has a touch screen computer control system that accepts control inputs and provides status, fault/alarm conditions, and metered parameter information. This information is available on the front panel screen of the transmitter and also via an Ethernet connector. The table on page 3 defines the specific control functions, monitored test points on the front panel, transmitter operating status, fault/alarm conditions, and metered voltages, currents, and operating times.

The front panel consists of the touch screen that allows for individual controls and as well for operation remotely through the Ethernet connection. Analog test points are available for diagnostic and performance assessment on the rear panel. These test points are buffered to allow the use of standard test equipment such as oscilloscopes, RF spectrum analyzers, and RF power meters.

The remote interface utilizes an Ethernet IP address with CPI EDB standard protocol and command set. All the front panel information and functions that are available on the control panel are also available via the remote interface. In order for the transmitter to be remotely operated, the Front Panel local/remote switch must be commanded to remote. The analog test points are not remotely available.



## **CPI Electron Device Business Magnetron Transmitter**

Pulsed operation and timing are derived from an externally supplied modulator gate signal. This gate will determine the duration of the output RF and pulse repetition frequency (PRF). Internal monitoring circuits will ensure that the acceptable pulse width, PRF, and duty cycle limits of the transmitter are not exceeded. This modulator gate signal is not part of the serial interface and must be supplied separately via a dedicated low impedance driver.

With the servo-amplifier option, the operating frequency of the magnetron is controlled by an analog voltage applied to the servo amplifier. The voltage is scaled to be +/-5 V for full band deflection and will achieve the whole band tuning in 10 cycles per second. The frequency tuning accuracy and / or step size depends on the frequency and bandwidth and can be step tuned or swept tuned across the band.

#### **Fault Protection**

#### Remove pulses for:

- Beam over current
- Filament fault
- Over duty
- High voltage power supply faults
- Low voltage power supply under voltage fault
- Over temperature
- External Interlock

#### **Control Functions**

- Main power On/Off (front panel circuit breaker)
- Transmit/standby (RF On/Off)
- Fault reset
- Local / remote select

## **Fault Display**

- Fault sum
- Interlocks open (external or cover)
- Magnetron average over current
- Magnetron peak over current
- · High voltage low
- · High voltage current high
- Filament voltage
- Filament current
- Over temperature
- Low voltage power supply
- Drive power supply
- Duty cycle high
- Fault log
- Tuner fault
- Servo fault (option)

## **Front Panel Monitoring**

- Magnetron pulse current (0.1 V/A)
- Trigger sample


## **Display Monitoring**


- Power on
- Heater time delay
- Standby
- Transmit (RF On)
- Local/remote
- Beam elapsed hour meter
- Heater elapsed hour meter
- Magnetron average current
- High voltage
- High voltage power supply current
- Filament voltage
- Filament current



## **CPI Electron Device Business - Magnetron Transmitter**

ETHEDNET		
ETHERNET		
Control Signals	Description	Comments
Control Inputs	Filament power on Radiate Input Gate Reset	Available at touch screen and remotely Available at touch screen and remotely +5 V into 50 ohms, variable width Available at touch screen and remotely
Control Adjustments	Peak current adjust Frequency adjust	Available at touch screen and remotely Front panel inputs
Status Outputs	LVPS fault HVPS fault Filament PS fault Magnetron over current Over duty Over-temp. Interlock	Available at touch screen and remotely LVPS < 80% nominal HVPS < 80% nominal Out of regulation Avg. current > 50 mA, peak current > 50 A Duty over 0.001 Excess temperature Open interlock
Meter Outputs	Pulse avg. current HVPS voltage Mod. avg. current Filament voltage Filament current Filament hours Radiate hours Internal temperature	Available at touch screen and remotely

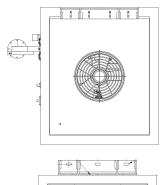

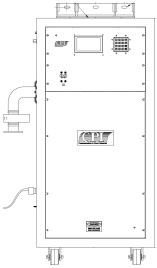

### **Electrical Parameters**

Frequency Range	1 GHz to 35.56 GHz Depends on magnetron selected	
RF Output	Up to 400 kW (max.)	
Duty Cycle	0.001 Typical	
Pulse Width	0.2 μs to 3.0 μs (continuously variable)	
Maximum PRF	4 KHz	
Prime Power	208 VAC (3 phase with neutral) 50/60 Hz	

Mechanical and Environmental Parameters			
Ambient Temperature	-10°C to + 50°C		
	operating		
Shock and Vibration	Ground benign (typical		
	transportation)		
Cooling	Air cooled		
RF Output Connection	Waveguide		
Control I/O	Ethernet		
Dimensions (width)	22 inch (57.4 cm) rack		
Dimensions (height)	59.5 inch (151.1 cm)		
Dimensions (height)	max.		
Dimensions (depth)	37 inches (94 cm)max.		
Weight	350 lbs. (159 kg)		
vveigiit	without magnetron		



Beverly Microwave Division

150 Sohier Road Beverly, Massachusetts USA 01915 tel +1 978-922-6000 email ElectronDevices@cpi-edb.com

fax +1 978-922-8914 web www.cpi-edb.com For more detailed information, please refer to the corresponding CPI EDB technical description if one has been published, or contact CPI EDB. Specifications may change without notice as a result of additional data or product refinement. Please contact CPI EDB before using this information for system design.

©2024 CPI Electron Device Business. Company proprietary: use and reproduction is strictly prohibited without written authorization from CPI EDB.